

CINO F680 – Enable / Disable Inverse Reading

Enter Program Mode



Inverse Scanning



Choose either of the following:

1 = Enable



0 = Disable



Finish



END – Exit Program Mode

